


Radio remote 91354

Trouble shooting.

Battery change.

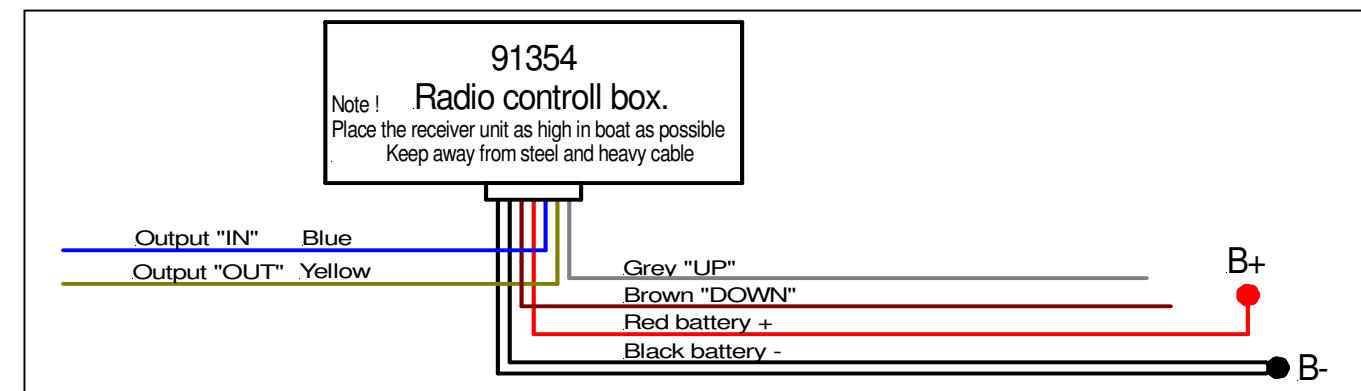

1: Check that you have battery power on B+ and B-.

If not, check fuse and on/off switch.

2: Check if red led in ON button is illuminated when pushing any button. Check all buttons. If not, check battery or change battery.

Change battery: Unscrew 4 small screws, flip of top part, remove rubber keyboard, remove switch board (green) from lower part, battery located on the back side of switch board.

If round flat battery, CR2032 if tube type 27A (12v)

3: If the red led don't illuminate when you push the UP button (or other buttons) it may one or more buttons have bad connections or corroded.

Use CRC556, WD40 or similar products and gently spray some direct on the button. Push the button until the red led lights.

The red led should light as long as you push the red buttons.

Button ON, clean contact surfaces on switch board and two small black areas on rubber button with alcohol.

4: If red led illuminated when you push all buttons and you have battery power on B+ and B-.

Hold ON button for 3 sec, push UP button, you will hear a small click inside the control box.

Then check DOWN, IN and OUT button, if clicking its ok.

If the windlass don't work but you hear the control box clicking, check wiring and cable connectors.

5: If you don't hear any clicking inside the control box and the red led is illuminating when you push any

buttons on the hand control, try reprogramming the hand control to the control box.

Follow user manual instructions.

Unscrew 4 screws



Flip of bottom cover



Spray buttons with CRC556



Battery on the back side



Mount switch board and rubber keyboard



Mount top cover

