



## Mount Stainless Steel cover Stingray SC512 SC712

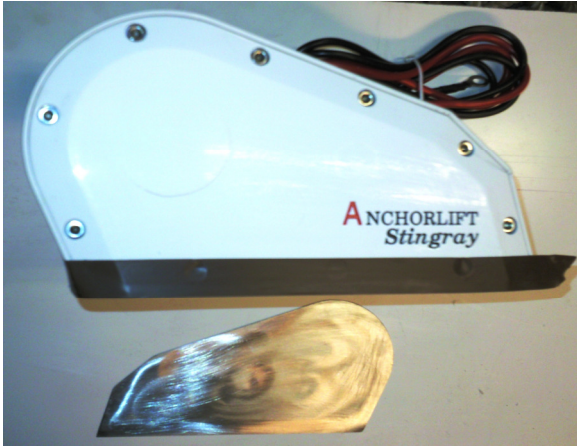

Add some tape so that the lower bolts are hidden  
Clean with alcohol.  
Sand with sand paper on the field where the steel plate shall be on the windlass and back side of steel cover.  
After sanding, clean both windlass and steel cover surfaces again with alcohol.

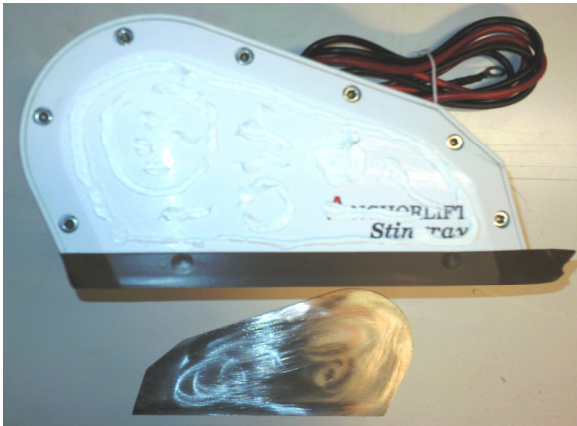

When alcohol has dried apply glu on th windlass.  
Use polyurethan sealant.  
Sikaflex 11FC  
Sikaflex 290DC  
3M Fast Cure 4200  
or simmilar products.

### Note!

Before mounting the cover, make shore the cover is absolutly flat. After the polishing the cover can bend a bit.



Mount stainless steel cover on windlass.